

ATS-3PC150-22

Double Throw ATS With Neutral OFF
Rated Current 150 Amps Voltage 220/120 VAC

Features


- Programmable Control ATS
- Open Transition-Delay on center OFF 1 to 20 sec.
- Electrically operated mechanically held type ATS
- Manual Emergency Override handle
- NEMA 3R enclosure with lock
- Switch Position connection indicator lights
- Checks for normal source over and under voltages
- Built-in 7-Days exerciser -- with or without load
- Adjustable TDEN, TDNE, TDES, TDEC timers
- Designed for the cell-phone industry, industrial & home use
- Compact size, easy instalation



ATS-3P150-22 Specifications

Rated Voltage	120/240 VAC	Overvoltage Trip	270VAC Adjustable
Rated Current	150 A	Overvoltage Reset	260VAC
Rated Frequency	50/60 Hz	Undervoltage Trip	170VAC Adjustable
Transfer	Double Throw Type	Undervoltage Reset	180VAC
Operating Current	2.6A @ 220V	Adjustable Time Delay	TDEN 0 ~ 30 Sec. $\pm 10\%$
Poles	3P		TDNE 0 ~ 30 Sec. $\pm 10\%$
Rated Short-Time Current	10 KA/one sec. @ 250 VAC		TDEC 0 ~ 120 Sec. $\pm 10\%$
Short Circuit Peak Value	25 KA		TDES 0 ~ 90 Sec. $\pm 10\%$
Utilization Category	AC-33A*		TD OFF 0 ~ 18 Sec. $\pm 10\%$
Life	>6000 Times With Load		
Model Number	TSC3P150-22	Remote Start Dry Contact Capacity	6A @ 277 VAC / 6A @ 28 VDC Max
Class	PC	Power Consumption	< 1W
Connection	Front	Door Mount Cut-Out	47.0 \pm 0.5 mm Wide x 162 \pm 0.5 mm
Plastic	UL94V-0		1.8 Inches wide x 6.4 Inches High

Mechanical Specifications

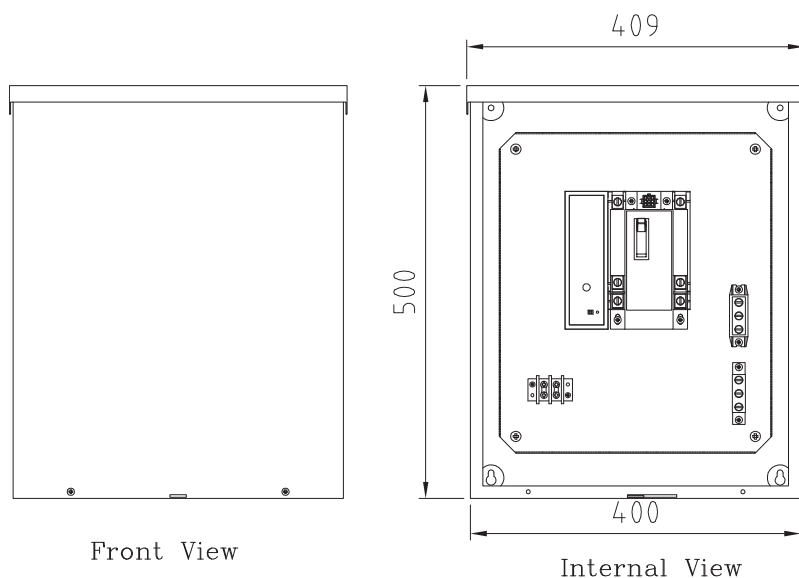

General Specifications

Weight	12,25Kg - 27 lbs
Dimensions	High 19.75 Inches 500mm
	Wide 15.75 Incehs 400mm
	Deep 5.5 Inches 140mm

Note: IEC60947-6 Utilization Category AC-33A

1. Frequent operations
2. Motor loads or mixed loads including motors, resistive loads and up to 30% incandescent lamp



JOVAL INDUSTRIAL
EFFICIENCY - EXCELLENCE - EXPERIENCE

CONTACT US TODAY!
JOVAL INDUSTRIAL LLC
MIAMI FL USA
P. 1-877-335-6825
Email: sales@jovalindustrial.com
www.jovalindustrial.com

TCS3P150

AUTOMATIC TRANSFER SWITCH CONTROL UNIT FOR 3Ø SYSTEM OPERATOR'S MANUAL



Patent Number: U.S. Pat. No. 7,557,683



JOVAL INDUSTRIAL
EFFICIENCY - EXCELLENCE - EXPERIENCE

CONTACT US TODAY!

JOVAL INDUSTRIAL LLC

MIAMI FL USA

P. 1-877-335-6825

Email: sales@jovalindustrial.com

www.jovalindustrial.com

TABLE OF CONTENTS

<i>Section</i>	<i>Page</i>
SECTOIN 1 : INTRODUCTION	
1.1 Safety Precautions	3
1.2 Products Overview	3
SECTOIN 2 : HARDWARE DESCRIPTION	
2.1 Front Panel.....	4
2.2 TCS3P150 Dimensions.....	5
2.3 Panel Cut-Out for the TC150	5
SECTOIN 3 : FUNCTION DESCRIPTION	
3.1 General	6
3.2 TDNE Setting	6
3.3 TDEN Setting	6
3.4 TDEC Setting	6
3.5 TDES Setting	6
3.6 TD-OFF Setting.....	6
3.7 Plant Exerciser	6
3.8 Over / Under Voltage Sensing	6
3.9 Transfer Failure	7
SECTOIN 4 : OPERATION	
4.1 Auto / Test Pushbutton	7
4.2 Auto Mode	7
4.3 Test Mode	7
4.4 Programming mode.....	7
4.5 Specification Summary	7
4.6 System Setting Reference Table	8
SECTOIN 5 : INSTALLATION INSTRUCTIONS	
5.1 General	9
5.2 Installation On The Plate	9
5.3 TC150 Installation On Front Panel	10
SECTOIN 6 : TYPICAL WIRING	
6.1 TCS3P150 Standard Wiring Diagram (220V)	11
6.2 TCS3P150 Standard Wiring Diagram (380/440/480V)	12

SECTION 1 : INTRODUCTION

1.1 Safety Precautions (WARNINGS)

This manual covers the installation, operation and maintenance of the TCS3P150 Automatic Transfer Switch. For qualified personal only.

WARNING
HIGH VOLTAGES CAN KILL.


1.2 Products Overview

The TCS3P150 automatic transfer switch consist of two parts the TS3P150 switch and the TC-V2 electronic control unit:

1.2.1 TS150 Features

The contacts on the Kutai TS3P150 transfer switch are class PC, this means that it is capable of making and withstanding short circuits but is not intended for breaking short circuit current.

- Rated operating Voltage : 600VAC.
- Rated operating Current : 150Amps
- Number of poles : 3P
- Coil operating voltage : 220VAC $\pm 20\%$
- Small size, lightweight and low power consumption
- Electrically operated and mechanically held
- Manufactured using UL 94V-0 plastics.
- Adjustable delay in OFF when transferring
- Designed for cell-phone repeaters, and many industrial and home ATS applications.

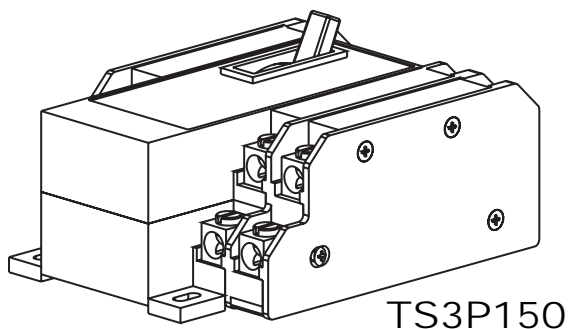


1.2.2 TC-V2 Digital Controller

The TC-V2 digital control unit offers programming flexibility to customize the ATS to different customer requirements.


The Controller:

- Monitor normal source for full phase over and under voltages.
- Monitor emergency source for single phase over and under voltages.
- Normal & emergency source voltage and frequency parameter display.
- TDEN, TDNE, TDEC and TDOFF real time countdown display.
- Permit testing the transfer switch from the control panel.
- Permit testing the transfer switch with / without load from the front panel.
- 1 to 4 weeks exerciser timer
- Permit customer plant exerciser test with / without load on a preset period.
- Store customer / factory established parameters in permanent memory.
- Shows status and fail alarm LED's on the front panel.
- No need for a PC connection and programming software. All programming can be done in the field.
- Design for installation next to switch or on the front panel.

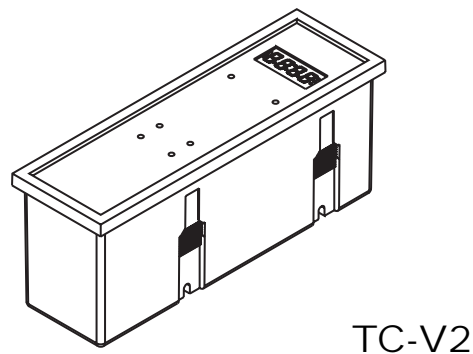


SECTION 2 : HARDWARE DESCRIPTION


2.1 Front Panel

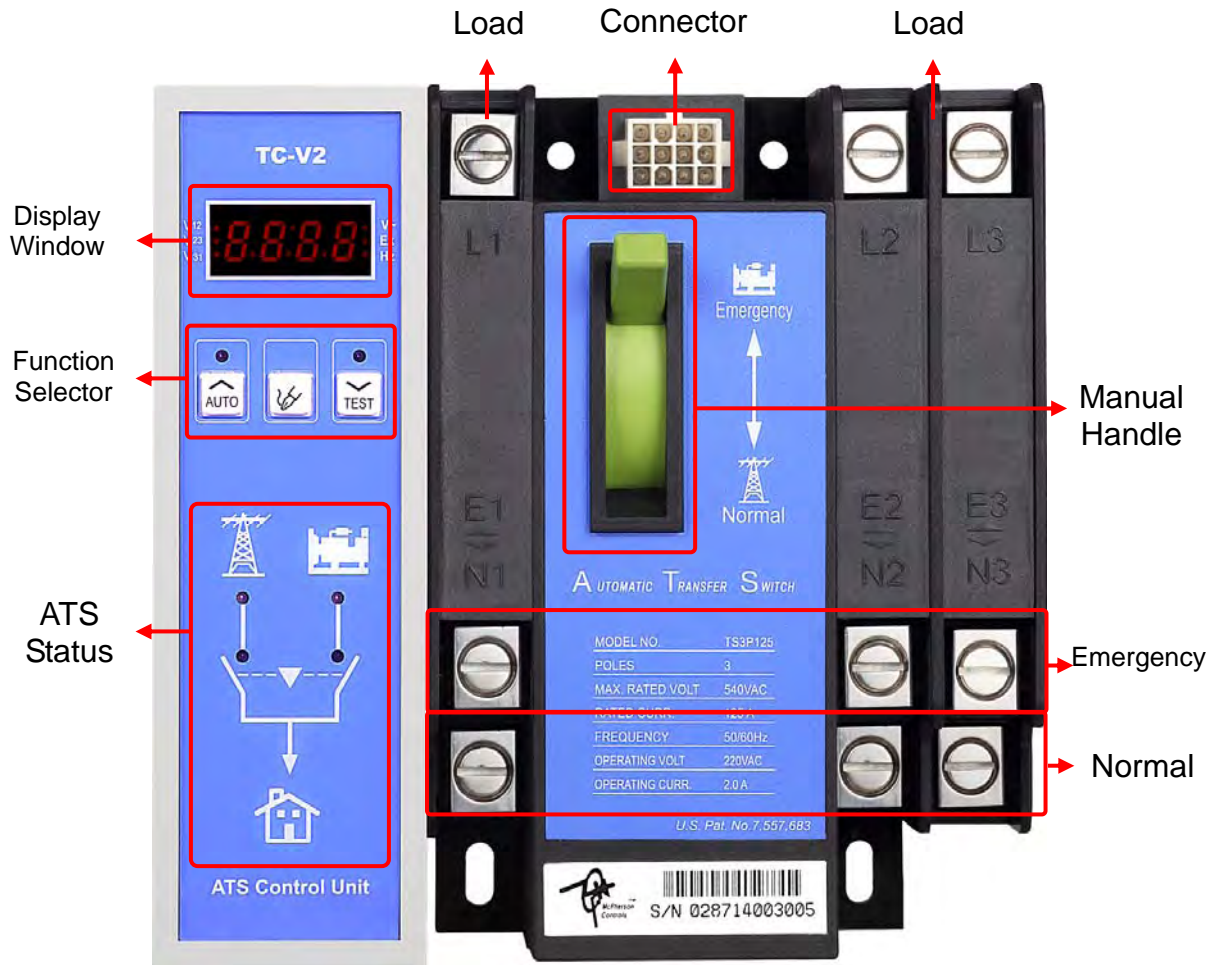

2.2 TCS3P150 Dimensions (Unit: mm)

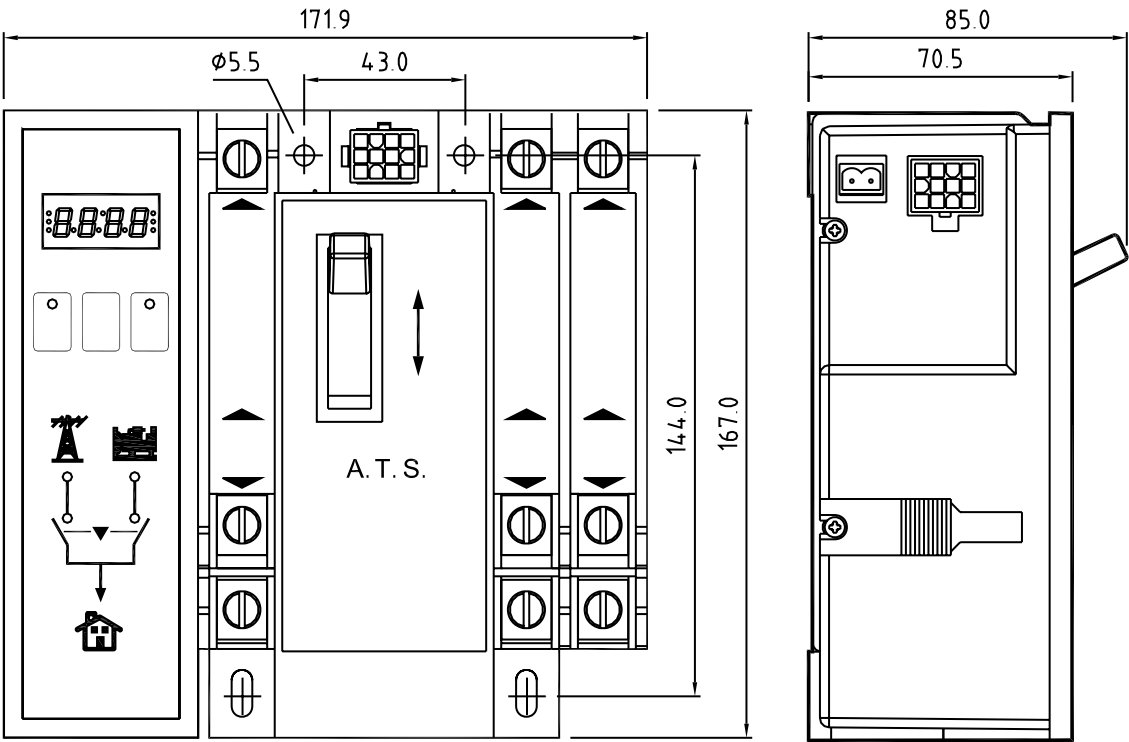

2.3 Panel Cutout for the TC-V2 (Unit: mm)

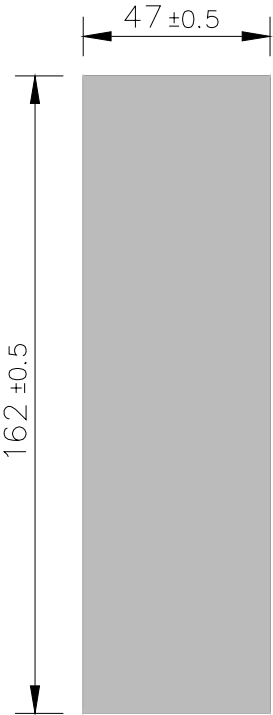

SECTION 3 : FUNCTION DESCRIPTION

3.1 General

Operation of the TCS3P150 electronic control

3.2 TDNE Settings

TDNE provides a time delay when transferring from **N**ormal to **E**mergency. Timing begins when the Emergency Source (generator) becomes available.

TDNE : Adjustable from 0 to 99 seconds.

3.3 TDEN Settings

TDEN provides a time delay when transferring from **E**mergency to **N**ormal. This permits stabilization of the Normal Power before transferring back to normal. Timing begins when the Normal Power returns and becomes available and steady.

TDNE : Adjustable from 0 to 99 seconds.

3.4 TDEC Settings

TDEC timer keeps the generator running without load (**E**ngine **C**ool-down) after the ATS transfer back to Normal Power. Timing begins when the transfer back to normal is completed.

TDEC : Engine Cool-down - from 0 to 99 sec.

3.5 TDES Setting

TDES is the time delay for **E**ngine **S**tart when the Normal Source voltage is in over or under-voltage (OV or UV). If power return to normal while timing, the TDES timer resets and starts again.

TDEC : Adjustable from 0 to 30 seconds.

3.6 TD-OFF Setting

Time Delay on OFF this timer keeps the switch in the center neutral OFF position (completely disengaged) before transferring to the other side. You can preset the switch in Neutral or OFF from 0 to 18 seconds (2 to 3 sec in normal).

TD-OFF : Adjustable from 1 to 20 seconds.

3.7 Plant Exerciser

This feature provides for automatic test operation of the generator. The interval is fixed at once per 1 to 4 weeks with a specific test day and time. The exerciser can be set for either testing with load or without load.

When the exerciser is activated the exerciser LED (**EX**) on the right side of display flashes and turns on during the exercise period.

3.8 Over / Under Voltage Sensing

The TC-V2 constantly monitors normal & emergency power. When power falls outside the programmed voltages this LED turns RED and flashes to show OV / UV problems.

Adjustable Over voltage range : 110VAC ~ 530VAC

Over voltage reset : When voltage falls below 10VAC of the OV setting

Adjustable Under voltage range : 80VAC ~ 470VAC

Under voltage reset : When, voltage exceeds 10VAC of the UV setting

3.9 Transfer Failure

When a transfer is made the TS150 communicates it's position to the TC-V2 controller by using two small internal micro-switches, if this signal is not received, it will try switching 3 more times every 2 seconds or until the connection is made. A flashing light indicator and a "FAIL" signal displayed an incomplete transfer and that the ATS mechanism or wiring is defective.

If the ATS fails, the TC-V2 controller stops all ATS functions, and starts' flashing until the failure is corrected, and the control is reset.

To reset the transfer fail alarm:

1. Manually move the ATS to the correct position.
2. Press any buttons (Auto、Program or Test) on the front panel to reset the alarm.

SECTION 4 : OPERATION

4.1 General

This section specifically describes the operation and functional use of the TC-V2 controller.

4.2 Auto Mode

In AUTO the TC-V2 controller, automatically transfer and retransfers from source to source as directed by the pre-programmed instructions.

In AUTO the controller, monitor the condition of both normal and standby power sources providing the logic for the transfer operation.

4.3 Test Mode

The TC-V2 is provided with a test pushbutton that simulates the loss of normal source. Pushing the Test key the TC-V2 runs a test on the ATS. The TDES and TDNE programmed time delays will be performed as part of the test. There are two test modes:

- Testing with load
- Testing without load

4.4 Programming Mode

The TC-V2 controller is fully programmable from the front panel when in Program Mode. The build-in program buttons have multiple functions :

- Real time clock displaying
- Programming mode operating

To enter programming mode, push and hold the **Program** button for 10 seconds. In the first 10 seconds, the screen showing internal real time clock and then the word "**Vr 1.0**" appears on the front display window for 2 seconds indicating the version of the software.

At this time start a line-by-line programming sequence. To advance to the next line, push the **Program** button on the front panel. To change each lines programming parameters, press the increase (**Λ**) and decrease (**∇**) buttons. When pressing and releasing the (**Λ**) or (**∇**) key the displayed parameter can be increased or decreased by one. The parameter will continue to scroll if the (**Λ**) or (**∇**) buttons are pressed and held.

Always push the "**Program**" button to advance to the next line or until the word, "**End**" appears on the screen. To end the programming mode, you simply

push the "**Program**" button for 4 seconds. Then the word "**End**" shows on the screen indicating the end of the programming mode.

If you like to return to factory settings, stay in programming mode and simultaneously press all 3 buttons (**Λ**), (**∇**) and **Program** buttons for 4 seconds. The TC-V2 will now automatically program itself to factory settings and the word "**Au.Po**" will appear on the display window.

4.5 Specification Summary

PARAMETER	SPECIFICATION
Rated Voltage	600 VAC
Rated Current	150 Amp
Rated Frequency	50/60 Hz
Poles	3P
Switch Type	Double Throw
ATS Class	Class PC
Operation Life	Over 6000 Times W/L
Transfer Current	2.0A @ 220VAC
Remote Start contactor	6A @ 277VAC Max
N & E On contactor	7A @ 250VAC Max
Power Consumption	<1W
Operating Temperature	-10°C ~ 70°C
Storage Temperature	-20°C ~ 80°C
Operating Humidity	0 to 95%
Weight	1.8kg ±2%

4.6 System Setting Reference Table

ITEM	DESCRIPTION	SETTING	FACTORY SETTING
1	Is this ATS operator in 1Ø or 3Ø	01) 1Ø 02) 3Ø	02
2	TDNE – Time delay normal to emergency	00 ~ 99 sec	10sec
3	TDEN – Time delay emergency to normal	00 ~ 99 sec	10sec
4	TDES – Time delay engine start	00 ~ 30 sec	5sec
5	TDEC – Time delay engine cool-down	00 ~ 99 sec	60sec
6	TD-OFF – Time delay on OFF position	01 ~ 20 sec	5sec
7	Normal source over voltage setting	11 ~ 53 (110V ~530V)	25 (250V)
8	Normal source under voltage setting	08 ~ 47 (80V ~ 470V)	18 (180V)
9	Time delay if there is a problem with normal source voltage output	0 ~ 99sec (0 = Without volt monitor function)	10sec
10	Standby source over voltage setting	11 ~ 53 (110V ~530V)	25 (250V)
11	Standby source under voltage setting	08 ~ 47 (80V ~ 470V)	18 (180V)
12	Time delay if there is a problem with standby source voltage output	0 ~ 99sec (0 = Without volt monitor function)	10
13	Current day of week setting	01 ~ 07 (Monday to Sunday)	current
14	Current hour setting	00 ~ 23	current
15	Current minute setting	00 ~ 59	current
16	Plant exerciser test day of week	01 ~ 07 (Monday to Sunday)	06
17	Plant exerciser hour	00 ~ 23	12
18	Engine run time on exerciser	0 ~ 60 min (0 = Without exerciser function)	00
19	Exerciser cycle	01) Once a Week 02) Once every 2 weeks 03) Once every 3 Weeks 04) Once every 4 weeks	01
20	Plant exerciser test with or without load	01) Without load 02) With load	01
21	Plant Manual test with or without load	01) Without load 02) With load	02


SECTION 5 : INSTALLATION INSTRUCTIONS

5.1 General


The TC-V2 controller is modular and is designed for installation next to switch or on the front door panel. A longer harness is required for door installation.

5.2 Installation on the Plate


STEP-1

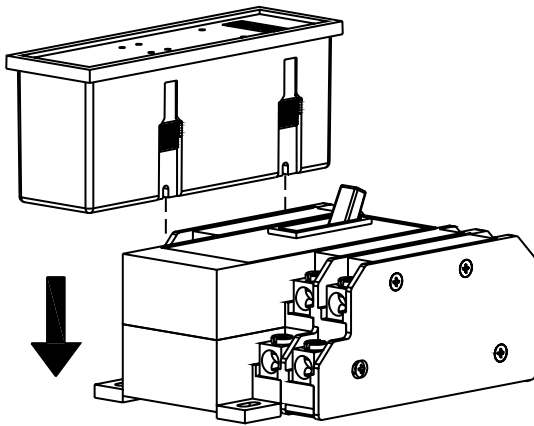


STEP-2

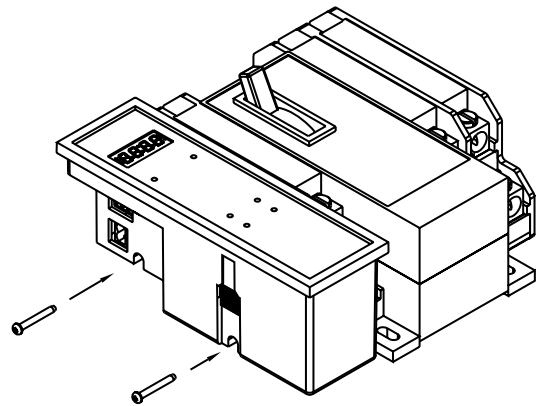

STEP-3

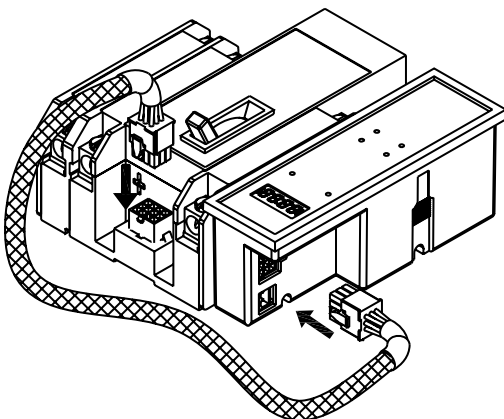


STEP-4

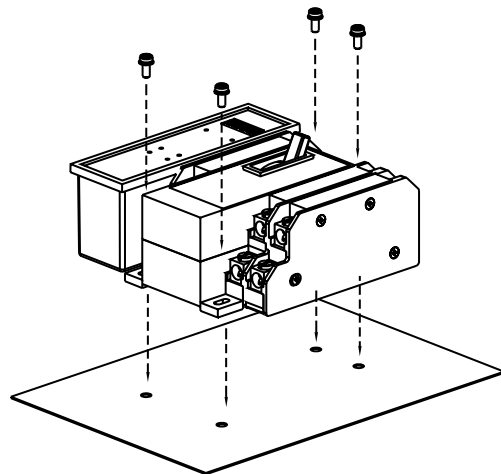


5.3 Installation on the Door Panel


STEP-1

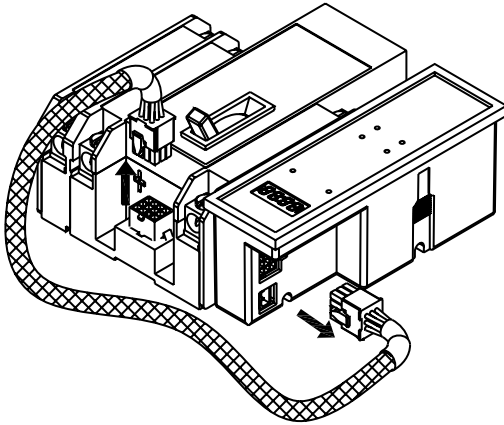


STEP-2

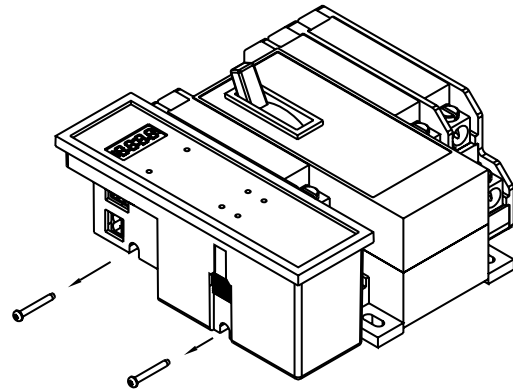


STEP-3

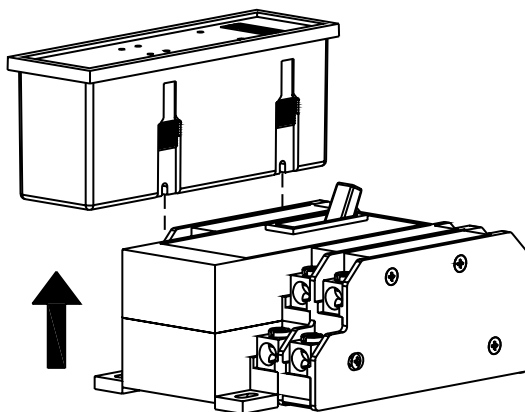


STEP-4

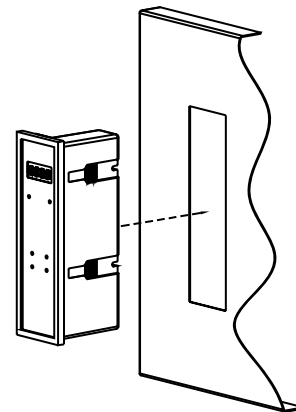

STEP-5


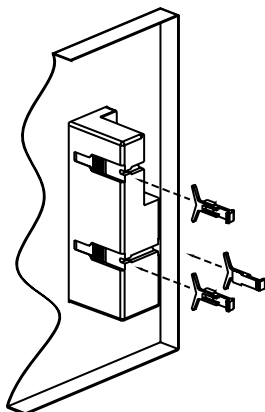


STEP-6


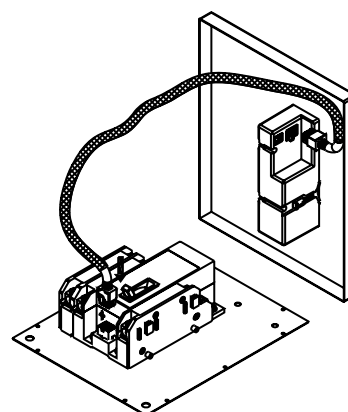


SECTION 6: TYPICAL WIRING

6.1 TCS3P150 Standard Wiring Diagram (220V)

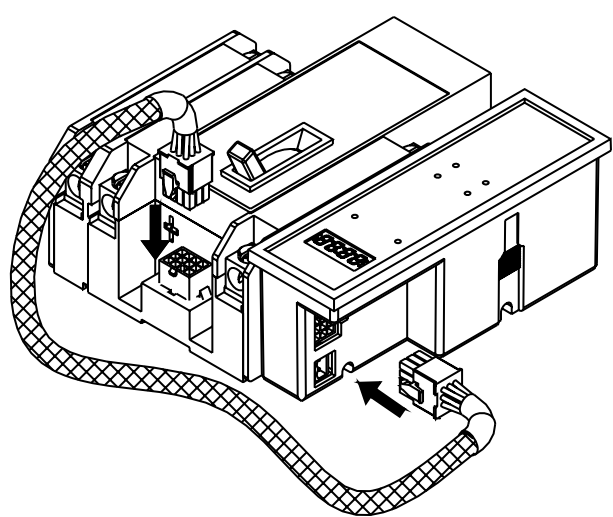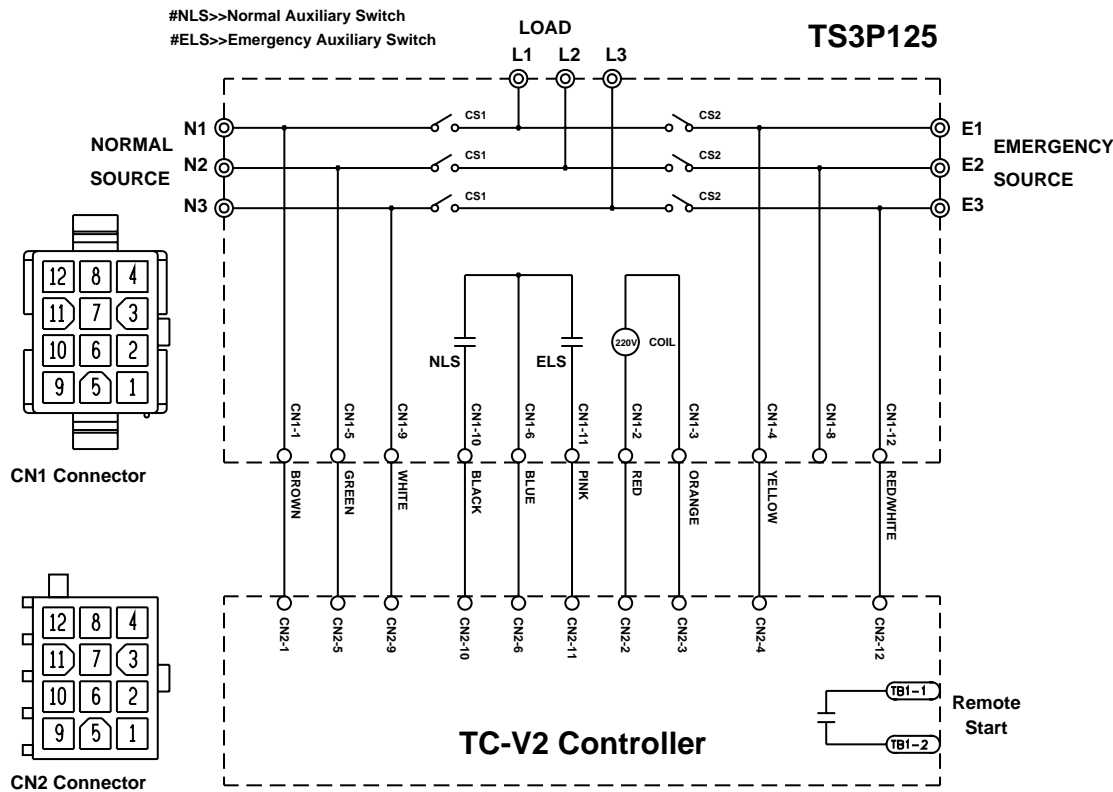

6.2 TCS3P150 Standard Wiring Diagram (380 / 440 / 480V)

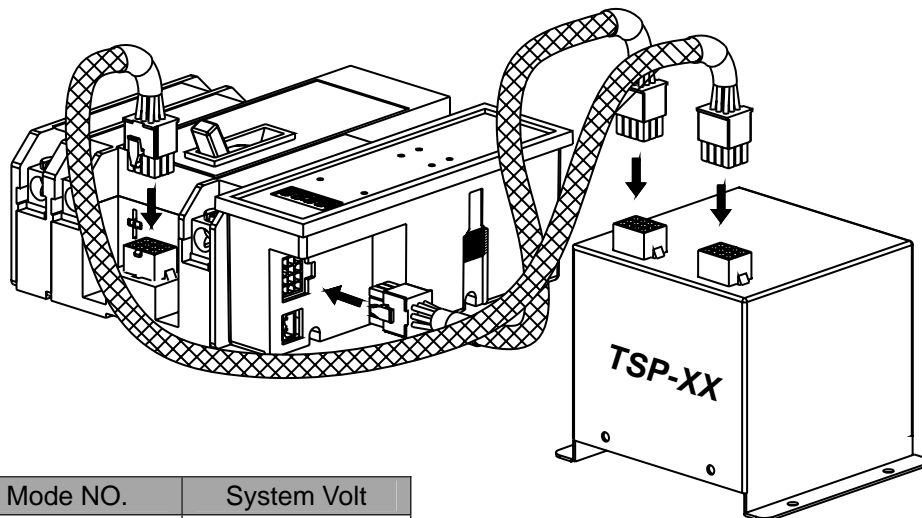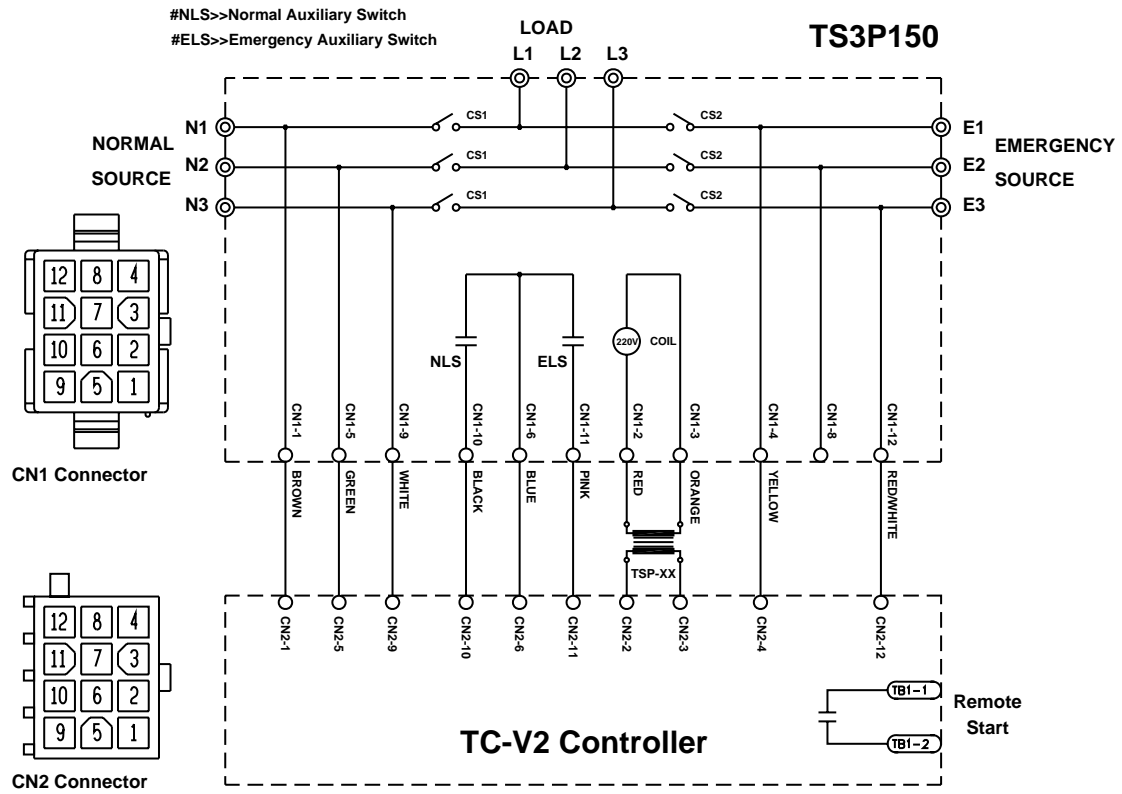

Mode NO.	System Volt
TSP-38	380VAC
TSP-44	440VAC
TSP-48	480VAC