

BTB2P4UD400N4

UL 1008

2P-BTB 400 Amp

Features

- Integrated programmable controller with switch save space, installation time and cost
- MCS type
- Electrical and Manual operation, Lug connections to avoid crimping
- Safety lock to avoid injury to personnel during maintenance
- Color LCD display allows direct input of settings
- All phase voltage/frequency monitor & protection for Utility & Generator
- Auxiliary contacts to indicate Utility or Generator MCCB closed
- Adjustable Weekly exercise timer from 1 to 4 weeks
- Both mechanical and electrical interlock protections
- Complies with IEC60947-6-1 and AC-33A Utilization Category
- Optional communication modules for remote monitoring and control with a Smartphone
- Option of English or Spanish language display
- All fault message accompany by an audio alarm to notify the user



File E511560

Patent Pending



MCCB Rated Current and Rated Breaking Capacity (Class CB only)

No. of Poles	Rated Insulation Voltage Ui (V)	Rated Current (A) Ambient Temperature 40°C	Rated Breaking Capacity IEC 60947-2 Icu / Ics (KA)
			220V / 240V
2P	690	400	50 / 25

Electrical Specifications

Operating Voltage	Refer to Model Number Description
Rated Frequency	50 / 60 Hz
Remote Start Output	7A @ 250 Vac Max.
Auxiliary Output	3A @ 250 Vac Max.

Adjustable Timer Settings

TDNE Time Delay Normal to Emergency	0 to 250 seconds
TDES Time Delay Engine Start	0 to 15 seconds
TDEN Time Delay Emergency to Normal	0 to 999 seconds
TDEC Time Delay Engine Cool-down	0 to 250 seconds
TDOF Time Delay in OFF position	0 to 99 seconds

Model Number Description

Product	No. of poles	IEC Category	Rated Current	Safety Certification	Applicable Voltages (VAC)	Enclosure
BTB	2	B	2	X	D	C

BTB 2P P Class PC *2 400A X Standard 220 / 240 C Outdoor 3R Fiberglass

*1 Class CB: Provides over current protection. The main contacts are capable of making and breaking short circuit currents.

*2 Class PC: Able to withstand but not capable of breaking short-circuit current.

Operating Environment

Operating Temperature	-20 to +70 °C
Storage Temperature	-30 to +80 °C
Relative Humidity	Less than 90%

Dimensions 600mm W x 800mm H x 300mm D
Dimensions 24in Wide x 32in High x 12in Deep

BTB TYPE AUTOMATIC TRANSFER SWITCH (ATS)

UL Programmable Automatic Transfer Switch Operation Manual



Main Switch Rated Current 2P/3P/4P 250Amp 2P 400 Amp

Main Switch Rated Voltage 690 Vac

Patent Number : M553490

U.S. Patents Pending

UL 1008 E511560



CONTACT US TODAY!
JOVAL INDUSTRIAL LLC
MIAMI FL USA
P. 1-877-335-6825
Email: sales@jovalindustrial.com
www.jovalindustrial.com

Easy on Screen programing without Reading the Manual

*After connecting the battery press OFF for 5 sec and program each line with up/down arrow
advance to the next line pressing OFF again*

The instruciones apper under each line you are programing

TABLE OF CONTENTS

Section	Page
SECTOIN 1 : SAFETY PRECAUTIONS	
SECTOIN 2 : RECEIVING INSPECTION	
2.1 Sample Instalation	3
2.2 Contents of Shipping Container	3
2.3 Overview of Exterior.....	4
2.4 Dimensions	4
2.5 Operation Buttons And Display Screen	5
SECTOIN 3 : INSTALLATION	
3.1 Installation Precautions	6
3.2 Recommended Wire Sizes and Torque Values	6
3.3 Description of Connection Terminals	6
SECTOIN 4 : SYSTEM PARAMETER SETTINGS	
4.1 Precautions When Connecting Power	7
4.2 System Parameter Settings	7
4.3 Screen Saver	7
4.4 System Parameter Settings Table	8
SECTOIN 5 : FUNCTIONAL TEST	
5.1 Functional TEST	9
5.2 Manual Transfer Knob	10
5.3 Safety Lock	10
SECTOIN 6 : PRODUCT INTRODUCTION	
6.1 Display Parameters.....	11
6.2 Monitoring Protection	11
6.3 Electrical Characteristics	11
SECTOIN 7 : OPTIONAL ACCESSORIES	

Easy on Screen programing without Reading the Manual

*After connecting the battery press OFF for 5 sec and program each line with up/down arrow
advance to the next line pressing OFF again*

The instruciones apper under each line you are programing

SECTION 1 : SAFETY PRECAUTIONS

NOTICE

Make sure that all required steps are completed.

CAUTION

Failure to follow proper procedure may result in permanent damage to the device.

WARNING

Failure to follow proper procedure may result in personal injury or death.

This manual contains information for the installation, wiring, suitable applications, operation and maintenance of the Automatic Transfer Switch. This manual should be read before operating the device. is

WARNING

Installation, wiring and setting of system parameters for this Automatic Transfer Switch should be done by qualified technical personnel. Improper installation, wiring or system settings may result in personal injury or damage to the equipment.

SECTION 2 : RECEIVING INSPECTION

The product should be inspected immediately after delivery to determine whether any damage has occurred due to collision during shipping. Also check that the product model and system voltage and the number of poles all match. If the container or the product is short of any items, or damaged, immediately contact the agent you purchased the unit from.



2.1 Sample Installation

CAUTION


Model nos. correspond to utility voltage range. If improper model is used it will cause malfunction or damage to equipment.

2.2 Contents of Shipping Container


2.2.1 ATS without enclosure : 1. Automatic Transfer Switch (1 set) 2. 5/16" hex key 1 ea.

2.2.2 ATS with enclosure : 1. Automatic Transfer Switch (1 set) 2. 5/16" hex key 1 ea.
3. Enclosure 1 ea. 4. Enclosure mounting hooks 4 ea.

2.3 Overview of Exterior (Figure 1)

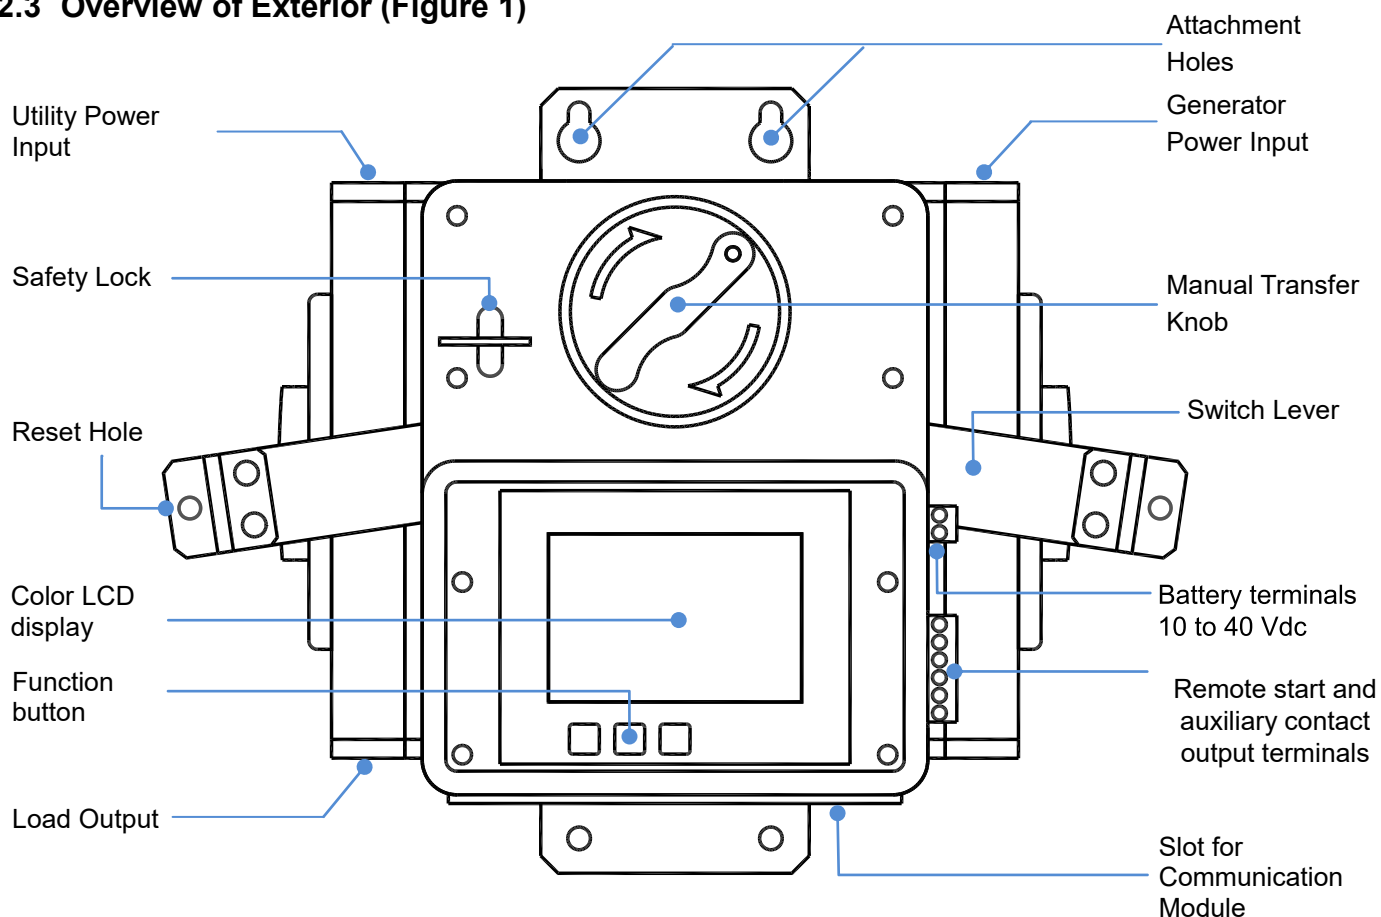



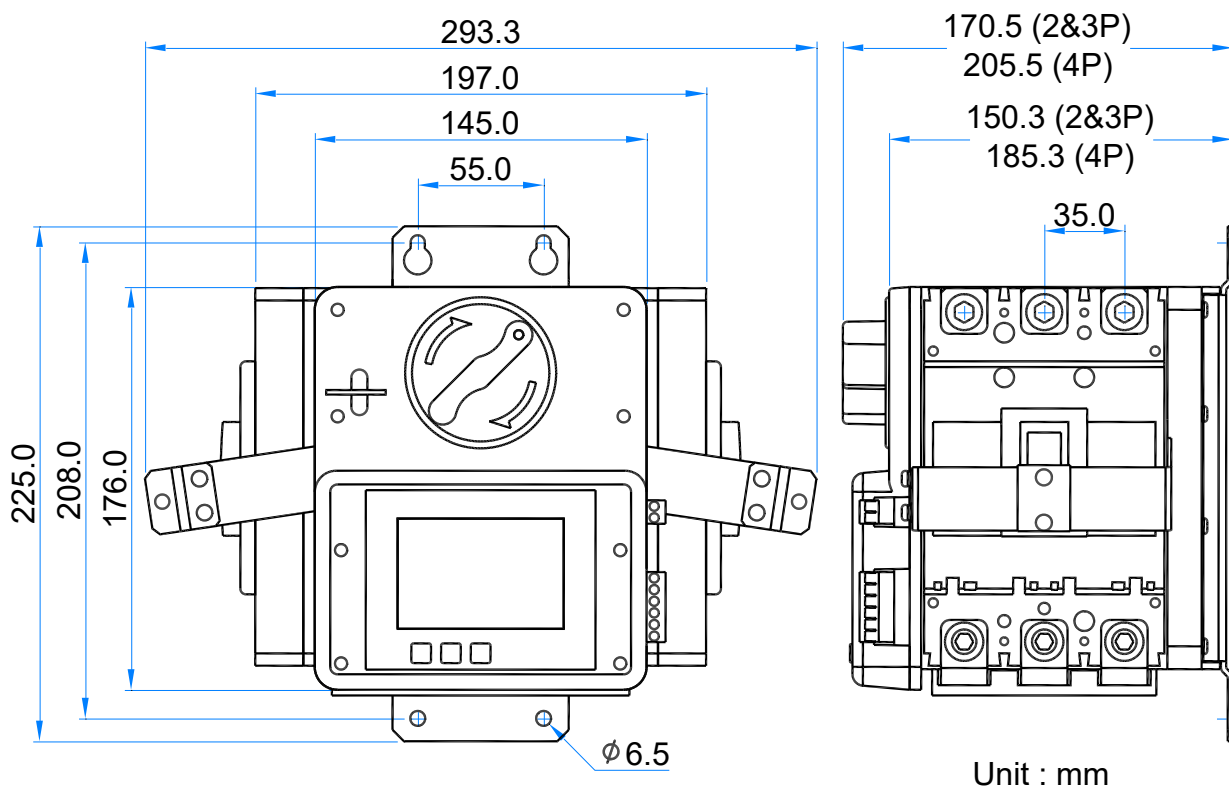



2.4 Dimensions (Figure 2)





2.5 Operation Buttons and Display Screen







Utility Power Status


-  No power and switch not closed
-  Power ready but switch not closed
-  No power but switch is closed
-  Power ready and switch closed
-  Transfer failure
-  Switch has Tripped

Load Status

-  Power to Load
-  No power to Load

Generator Power Status

-  No power and switch not closed
-  Power ready but switch not closed
-  No power but switch is closed
-  Power ready and switch closed
-  Transfer failure
-  Switch has Tripped

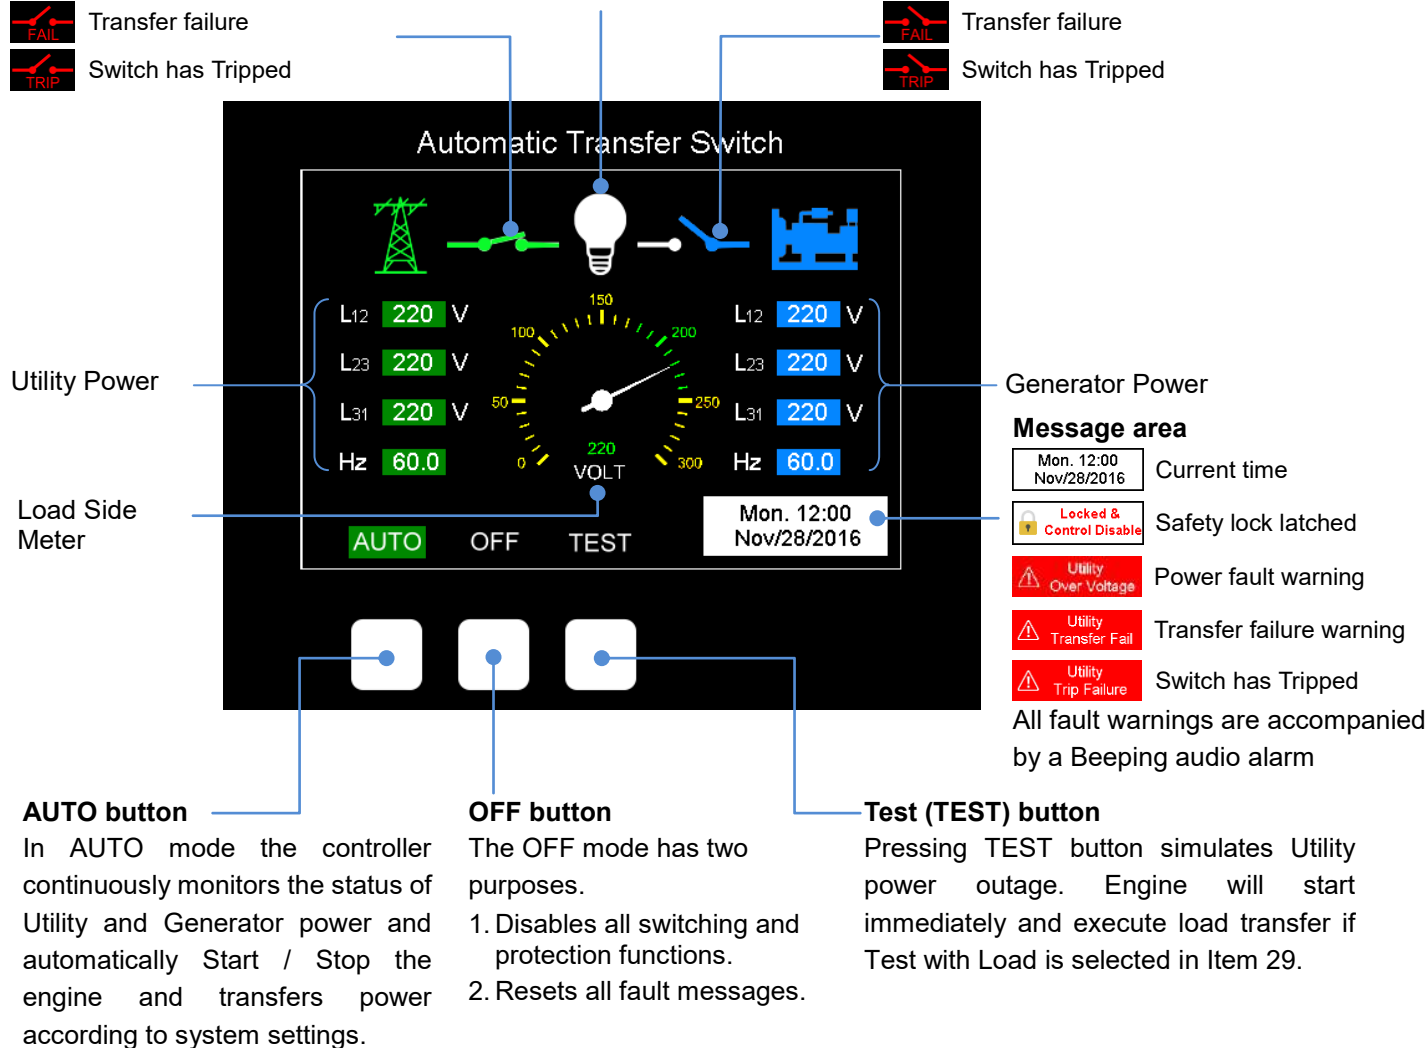

Easy on Screen programming without Reading the Manual


After connecting the battery press OFF for 5 sec and program each line with up/down arrow advance to the next line pressing OFF again

The instructions appear under each line you are programming


SECTION 3 : INSTALLATION

3.1 Installation Precautions (Figure 3)


1. When connecting power cables to the Automatic Transfer Switch reserve room for action of the transfer switch lever (Distance 80mm) to avoid hindering the action of the lever and preventing the switch from operating normally. All power cables should be fixed to the housing with tie straps.
2. The phase sequence of the Utility and Generator power must be the same to prevent reversal of operation of 3-phase motors.

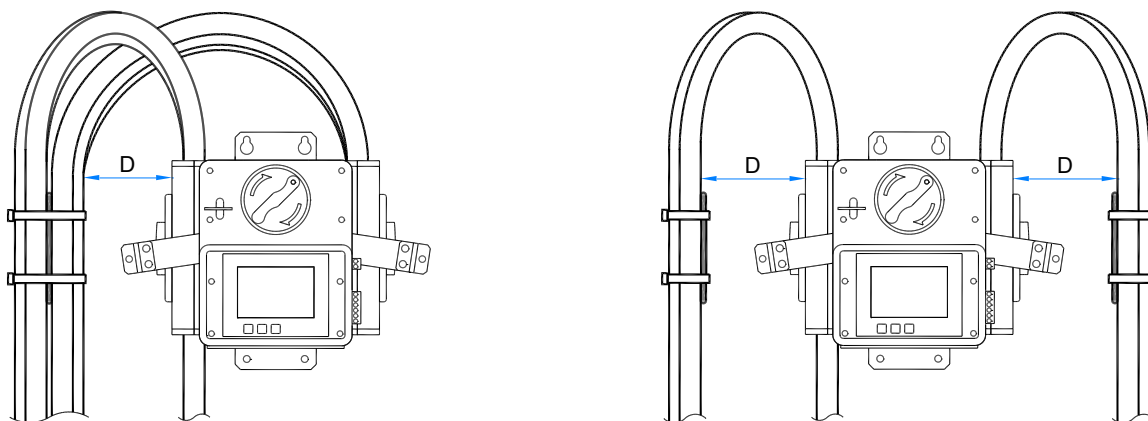

3.2 Recommended Cable Sizes and Torque Values

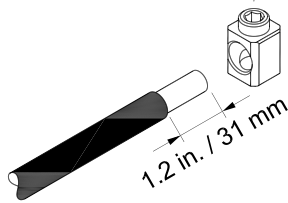Cable Size and Recommended Torque			
Rated Current (A)	Cable Size	Torque	Expose conductor
125	1 AWG (42.4 mm ²)	204 lb-in (23 N-m)	
150	1/0 AWG (53.5 mm ²)		
175	2/0 AWG (67.4 mm ²)		
200	3/0 AWG (85.0 mm ²)		
225	4/0 AWG (107.2 mm ²)		
250	250 MCM (127 mm ²)		


3.3 Description of Connection Terminals

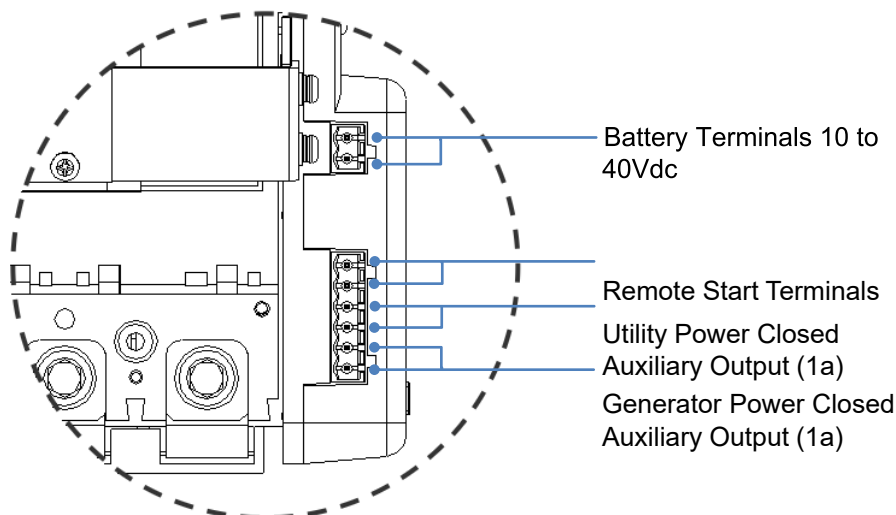

SECTION 4 : SYSTEM PARAMETER SETTINGS

4.1 Precautions when Connecting Power


10 to 40Vdc power supply is required to set system parameter settings.

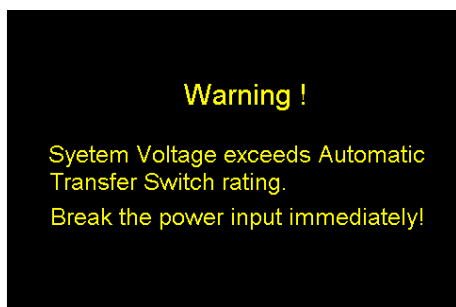

This screen indicates that the input voltage is too high and all power should be turned off immediately.

4.2 System Parameter Settings

All parameters of the ATS can be set directly from the operator panel. To enter setting mode press and hold **OFF** for 4 seconds until the program version screen appears. See the screen below.

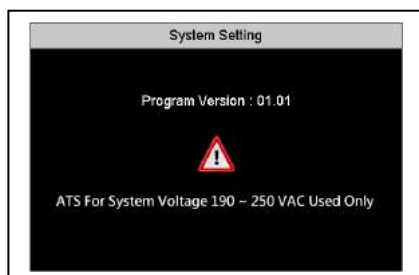

Green highlight represents the current setting Black highlight indicates setting range.

System Setting	
01- System Phase Setting	3 P
Adjustment : Single Phase (1P) / Three Phase (3P)	
02- TDEN Time Delay Emergency to Normal	10 sec
03- TDNE Time Delay Normal to Emergency	10 sec
04- TDES Time Delay Engine Start	05 sec
05- TDEC Time Delay Engine Cool-Down	30 sec
06- TDOF Time Delay in the OFF Position	05 sec
07- Normal Over Voltage Protection	250 V
08- Normal Under Voltage Protection	180 V

Use the ▲ and ▼ keys to change setting value. Press the ▲ or ▼ key to increase or decrease the setting value by 1 unit. If you hold down the ▲ or ▼ key the setting value will increase or decrease continuously until the built-in limit is reached. After completing the individual settings, press **ENTER** to save the setting and skip to the next line. For the factory settings of each parameter refer to Table.4.4.

The following three ways will end setting mode and return to normal operation.

1. Press **ENTER** repeatedly until the last setting item is reached.
2. Press and hold **ENTER** for 4 seconds
3. No button is touched for 60 seconds

4.3 Screen Saver

NOTICE

If the switch is not touched for 30 minutes the screen will go into Sleep Mode. Touch any button below to re-wake the screen or end the countdown screen. If there are any changes in status or faults power the screen will wake up automatically.

4.4 System Parameter Settings Table

LINE	DESCRIPTION	Setting Range	FACTORY SETTING
01	TDEN Time Delay Emergency to Normal	0 to 999 sec	10 sec
02	TDNE Time Delay Normal to Emergency	0 to 250 sec	10 sec
03	TDES Time Delay Engine Start	0 to 30 sec	05 sec
04	TDEC Time Delay Engine Cool-down	0 to 250 sec	30 sec
05	TDOF Time Delay in the OFF Position	0 to 99 sec	05 sec.
06	Utility over voltage protection	210 to 290 Vac	250V
07	Utility under voltage protection	160 to 230 Vac	190V
08	Generator over voltage protection	210 to 290 Vac	250V
09	Generator under voltage protection	160 to 230 Vac	190V
10	Set current Year	2017 to 2099	Current
11	Set current Month	01 to 12	Current
12	Set current Day of the Month	01 to 31	Current
13	Set current time Day of Week	Monday to Sunday	Current
14	Set current Hour	00 to 23 (24 hour system)	Current
15	Set current Minute	00 to 59	Current

Setting items for automatic exercise or remote monitoring


LINE	DESCRIPTION	VALUE	FACTORY SETTING
16	Set Day of Week for Automatic Exercise	Monday to Sunday	Saturday
17	Set the Hour to start Automatic Exercise	00 to 23(use 24 hour system)	12
18	Duration of Automatic Exercise	0 to 99 Minutes (set 0 for no exercise)	0 Min
19	Auto Exercise test with load or without load?	With Load or Without Load	Without
20	Meter Display on front screen	Display Voltage (V) or Frequency (Hz)	Volts
21	Remote Control by KCUxxx Module	Disable or Enable	Disable
22	Read or Delete Event Logs?	No - Read or delete	NO

SECTION 5 : FUNCTIONAL TEST

5.1 Functional TEST

After wiring and system settings are completed, the user should perform (AUTO) and (TEST)

5.1.1 AUTO Functional Test

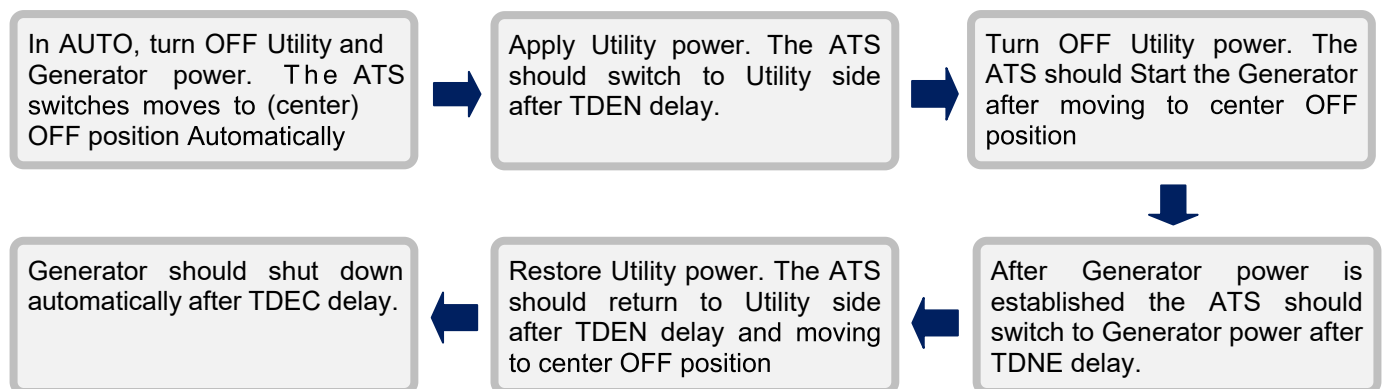


Easy on Screen programing without Reading the Manual


After connecting the battery press OFF for 5 sec and program each line with up/down arrow
advance to the next line pressing OFF again

The instruciones apper under each line you are programing

5.1.2 TEST with Load

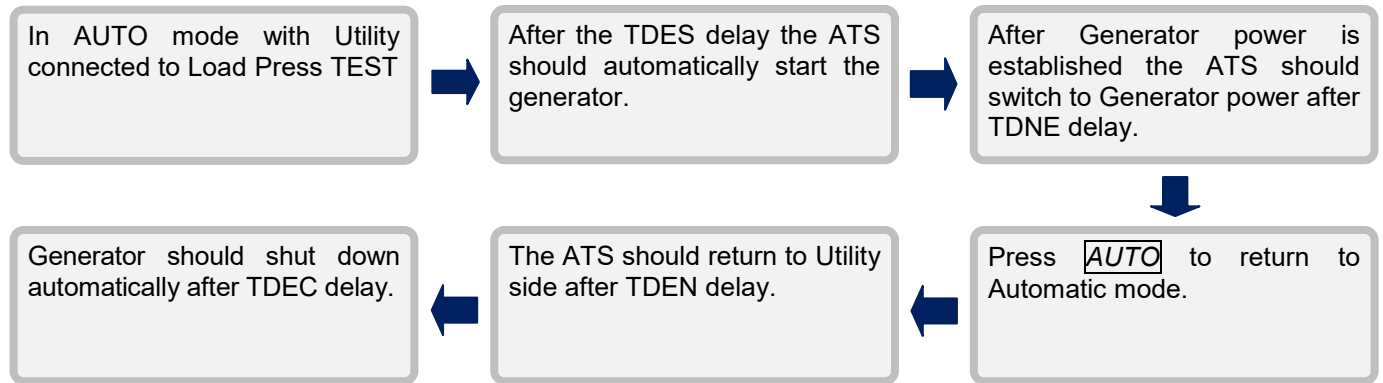

5.1.3 TEST without Load

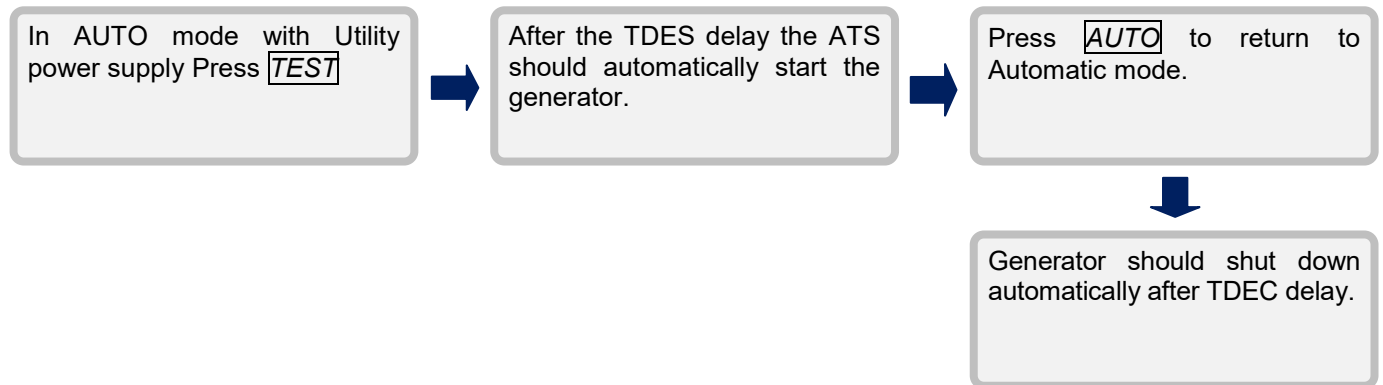

5.2 Manual Transfer Knob when in OFF


The Manual Transfer Knob turns only in clockwise direction to force a transfer of the switch unless in AUTO mode and status of power inputs changes.

5.3 Safety Lock


The Safety Lock is an override device. Once it is locked the following functions will become ineffective.

1. The manual operation handle will not operate and the switch will be held in current position.
2. All protection functions and panel buttons on the controller will be disabled.
3. The generator will continue its current state – either Running or Stopped.

Refer to the drawings below :

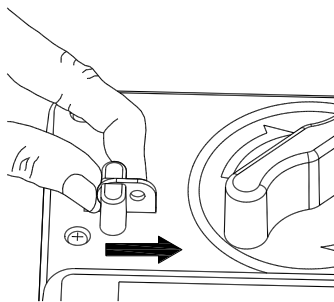

Step 1 : Push the safety lock inward

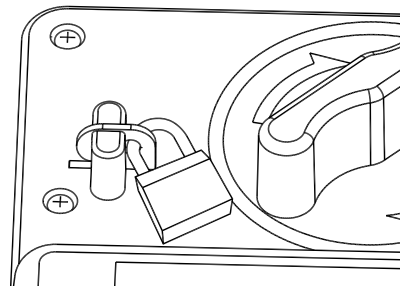

Step 2 : Use a padlock to secure the lock in a closed position

SECTION 6 : PRODUCT INTRODUCTION

6.1 Display Parameters

Graphic display of switch status
Utility power All Phase Voltage and Frequency
Generator power All Phase Voltage and Frequency
Analog meter for load side voltage or frequency
Fault Message and Warning Display

6.2 Monitoring Protection

Utility power All Phase Over/Under Voltage and Loss of Phase Protection
Generator power All Phase Over/Under Voltage and Loss of Phase Protection
Utility power Over / Under Frequency Protection
Generator power Over/Under Frequency Protection
Transfer Failure Warning
Breaker Tripped Warning (Class CB only)

6.3 Electrical Characteristics

ITEM	SPECIFICATION
Operating Voltage	Refer to Model No.
AC Power Frequency	45 to 65 Hz
Remote Start Terminals capacity	7 Amp @ 250 Vac Max.
Utility power auxiliary contact capacity	3 Amp @ 250 Vac Max.
Generator power auxiliary contact capacity	2.5 Amp @ 12/24 Vdc
TDNE Time Delay Normal to Emergency	0 – 250 seconds
TDES Time Delay Engine Start	0 – 30 seconds
TDEN Time Delay Emergency to Utility	0 – 999 seconds
TDEC Time Delay Engine Cool-down	0 – 250 seconds
TDOF Time Delay in the OFF Position	0 – 99 seconds
Static Power Consumption	Below 3W
Operating Temperature	-20 to +70 °C
Relative Humidity	Below 95%

6.4 MCS Rated Current 200 Amp Max 250 Amps

SECTION 8 : OPTIONAL ACCESSORIES

- ModBus communication module (KCU-05) Refer to KCU-05 User Manual for installation instructions.
2. SNMP communication module (KCU-06) Refer to KCU-06 User Manual for installation instructions.
3. Ethernet (Dynamic IP) Communication Module (KCU-31) Refer to KCU-31 User Manual for installation instructions.
4 KCU communication module cable (1 meter).
5 KCU communication module Interface Module (KCU-IF)

⚠ WARNING

When an optional communication module is used with the Automatic Transfer Switch can enable remote control and monitoring of ATS status and also start the generator unit. When using a remote communication module it is necessary to follow the instructions below, otherwise it could lead to injury to personnel or death :

1. The generator should be surrounded by a protective fence.
2. A permanent warning sign must be posted clearly to alert personnel. The warning sign should convey that "Generator could start at any time".
3. When servicing or working around the ATS or generator the ATS safety lock should be latched and the generator controller in the (OFF) mode to ensure the safety of personnel.

